
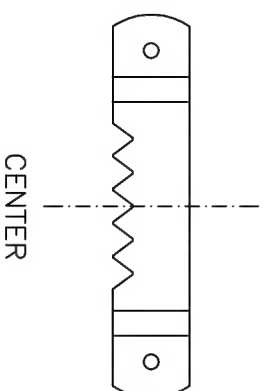


Framan Hanger™ Template & Installation Instructions

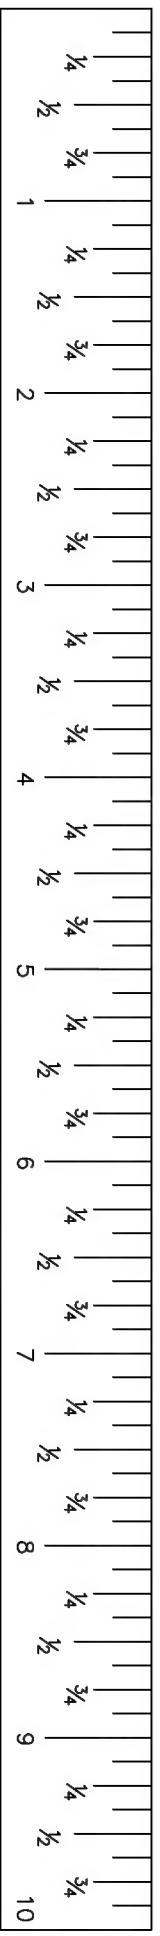

1. Print this page on 8.5x11" paper, set page scaling to "None."
2. Use paper ruler or a tape measure to find the center at the backside and top of the frame.
Proceed to step 5 if not drilling pilot holes.
3. Cut out template and adhere it with scotch tape at frame center found in step 2.
4. Drill two $\frac{1}{16}$ " pilot holes at spots shown on template while being careful not to drill through frame. Hint: Use masking tape to mark desired depth on drill bit.
5. Remove tape liners and place hanger on frame over template, if used, or centered at the location found in step 2. Make sure hanger is at top of frame with teeth pointing towards bottom of frame.
6. Use a #1 Phillips screwdriver to tighten the screws.

MAXIMUM WEIGHT: 8 LBS.

www.framanhanger.com